




Bluetooth Aqua Sun Blast  
Waterproof Solar Recharging Floating Ball  
with Quad Sound Speaker System  
**PWR95S**

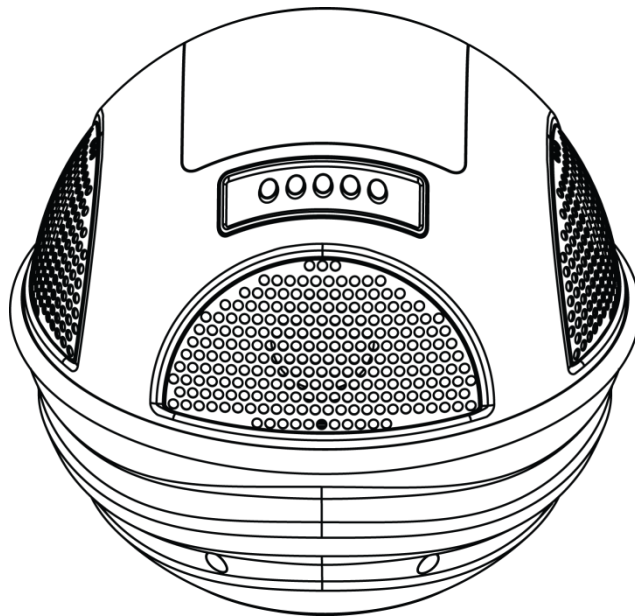

[www.pyleaudio.com](http://www.pyleaudio.com)

**USER'S MANUAL**

## Important Safety Instructions

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards.

Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

### 1. Ventilation

The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings; minimum distances 20 cm around the apparatus for sufficient ventilations.

### 2. Heat & Flame

The unit should be located far away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

No open flame sources, such as lighted candles, should be placed on the apparatus.

### 3. Power Source

The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Where the power adaptor is used as the disconnect device, the disconnect device shall remain readily operable.

### 4. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.

### 5. Cleaning

The unit should be cleaned only as recommended. See the section "Care and Maintenance" of this manual for cleaning instructions.

### 6. Object and Liquid Entry

Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the unit. It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### 7. Attachments

Do not use attachments not recommended by the product manufacturer.

### 8. Lightning and Power Surge Protection

Unplug the unit from the wall outlet and disconnect the periods of time. This will prevent damage to the product due to lightning and power-line surges.

### 9. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

### 10. Damage Requiring Service

This unit should be serviced by qualified service personnel when:

- A. The power supply cord or plug has been damaged.
- B. Objects have fallen into or liquid has been spilled into the enclosure.
- C. The unit has been exposed to rain.
- D. The unit has been dropped or the enclosure damaged.
- E. The unit exhibits a marked change in performance or does not operate normally.

### 11. Periods of Nonuse

If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged from the unit to prevent damage or corrosion.

### 12. Servicing

The user should not attempt to service the unit beyond those methods described in the user's

operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel. Contact Pyle Technical Support for any issues:  
support@pyleaudio.com

### 13. Environment

Attention: Do not dispose of batteries improperly pay attention to the environmental aspects of battery disposal and the use of unit in moderate climates.

## Features

Thank you for purchasing the Bluetooth Floating Speaker.

This model incorporates following features:

- Playback iPad /iPhone/iPod Touch and Android smart phone streaming audio through Bluetooth technology.
- Open air operating distance of up to 32 feet.
- Water proof Speaker
- LED Indicator
- USB cable (included) or AC-DC power adaptor (NOT included) for charging the rechargeable battery of the system.


iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Smart phone, iPad, iPhone, iPod touch are not included.


## Location of Controls

### Main Unit

#### Front View

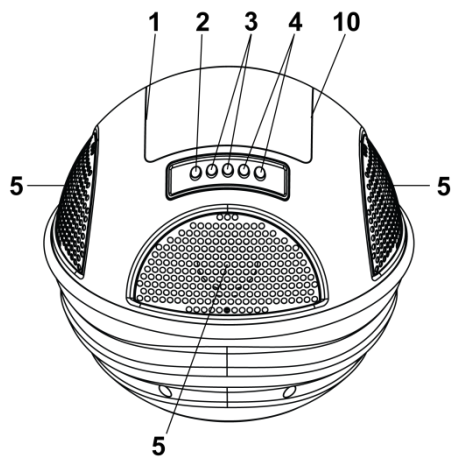

#### Bottom View

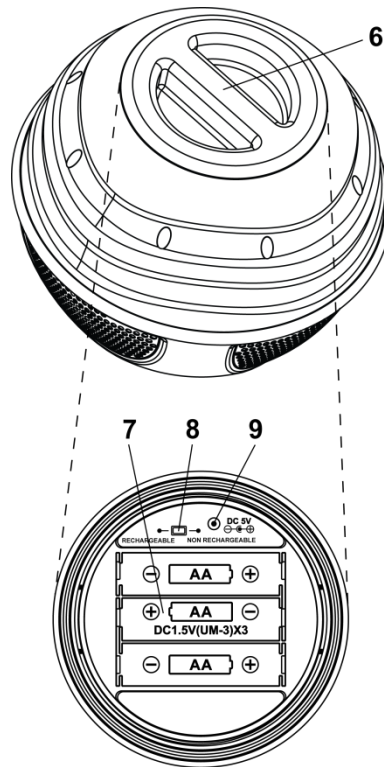

#### 1. Power / Bluetooth mode LED Indicator

- Power off mode: LED indicator is off.
- Whilst power on and searching Bluetooth device, LED indicator will blink in red and steadily light in green colour.
- Whilst power on and paired a Bluetooth device, LED indicator lights steadily in amber (red + green) colour.
- Press to turn the unit on / off.

#### 2. Power Button

#### 3. Button

- In Bluetooth mode: Skip tracks Forward / Backward.

#### 4. VOL +/- (Up/Down) Button

- Adjust the output volume level.

#### 5. Speakers

#### 6. Battery Compartment Cap

#### 7. Battery Compartment

#### 8. Battery Type Switch

#### 9. DC IN Jack

- For the connection of USB cable or external DC power supply

#### 10. Battery Type Switch position LED indicator

- At RECHARGEABLE position, LED lights on.
- At NON RECHARGEABLE position, LED turns off.

## Installation

Use only Alkaline batteries or rechargeable batteries like those included inside unit.

A battery compartment located at bottom of the unit.

(1) Unscrew the compartment cap counter-clockwise and open it.

(2) For the first time use:

Just remove the insulation tab attached in the battery compartment (if battery is included).

Screw the compartment cap clockwise and close it tight.

To install Rechargeable Batteries: The battery type switch must be slid to the RECHARGEABLE position. Follow the polarity diagram shown inside the compartment and install 3 x AA (UM-3) rechargeable type batteries.

Screw the compartment cap clockwise and close it tight.



To install regular Alkaline battery:

In case of regular Alkaline type battery is installed, take out the old battery then follow the polarity diagram shown inside the compartment and install 3 x AA (UM-3) type fresh batteries.

The battery type switch must be slid to the NON RECHARGEABLE position.

Screw the compartment cap clockwise and close it tight.

### Battery Type Switch

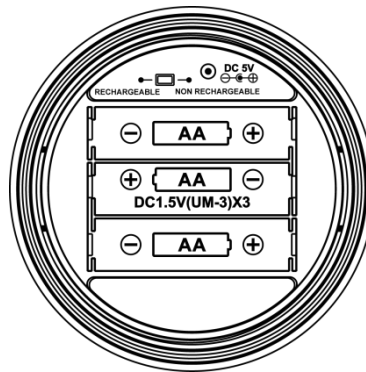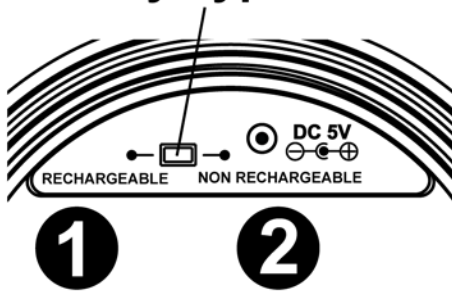

**Note:**

**1**

Switch to "RECHARGEABLE" position to charge the rechargeable battery.

**2**

Switch to "NON RECHARGEABLE" position when regular type (e.g. Alkaline type) battery is used.

**Caution:**

**Never switch to "RECHARGEABLE" position when regular battery (e.g. Alkaline type battery) is installed which will damage the battery or may cause explosion.**

**Warnings:**

- Battery should not be exposed to excessive heat such as sunshine, fire or the like.
- Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type are recommended to be used.
- If the unit is not to be used for an extended period of time, remove the batteries.
- Do not dispose of batteries in fire, battery may explode or leak.
- Danger of explosion if battery is incorrectly replaced.

### **USB cable or Power adaptor connection for charging the Speaker unit rechargeable battery**

You can use the included USB cable or AC-DC power adaptor (the output DC 5V 500mA, NOT Included) to charge the rechargeable battery in the Speaker unit.

- (1) Connect the USB cable or adaptor's DC output plug to the DC IN jack of the unit.
- (2) Connect the USB cable to USB port of laptop, computer...etc or firmly and securely plug adaptor's AC plug into AC main outlet.
- (3) The Charging RED LED Indicator will light.

**DC IN Jack**



### **Caution:**


This set-up is for charging the rechargeable battery of the Speaker unit only.  
Do not operate the Speaker with this set-up near Water and Moisture environment.

### **Charging the main unit rechargeable battery with Sun Light**

The embedded Solar Panel will charge the rechargeable battery when operating outdoors in a sunny area.

The Charging RED LED Indicator will light.

**Embedded Solar Panel**

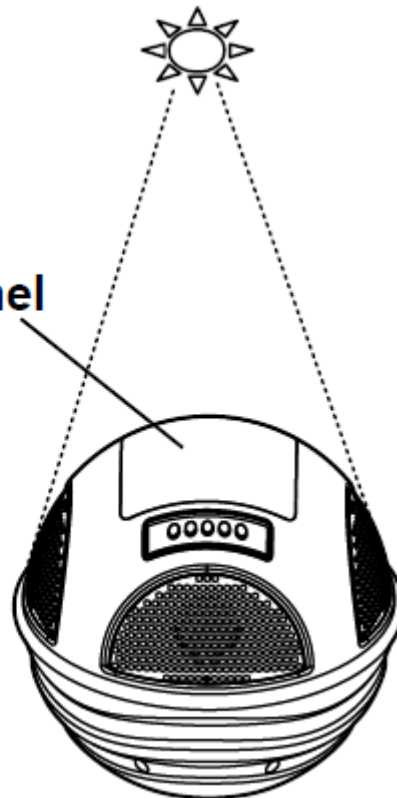

## Bluetooth Operation

The unit playback iPad/iPhone/iPod touch and other smart phone music through Bluetooth operation.

### **Before you did the Bluetooth pairing / connection, following information will help:**

(A) Whilst the main unit is searching for Bluetooth device (e.g. iPhone), the Bluetooth LED indicator will blink in red and steadily light in green color.

Whilst the main unit paired with a Bluetooth device (e.g. iPhone), the Bluetooth LED indicator will light steadily in amber (red + green) color.

(B) The Bluetooth device name of this model: **PWR95S**

In case the mobile phone/device pops up a dialog box which requests a PIN:

----- The PIN is "0000" for Bluetooth connection to this model

### **Bluetooth pairing/connection**

1. Press the Power  button to turn on the unit.
2. The unit will search neighboring Bluetooth device and the Bluetooth LED indicator will blink in red and steadily light in green color.
3. From the Android smart phone or iPad/iPhone/iPod touch, turn on its Bluetooth function and it will also search for the neighboring Bluetooth device.
4. From the Bluetooth device list of your smart phone or iPad/iPhone/iPod touch, tap on Bluetooth device name "BT speaker" of this model for the connection. In case it prompts for the PIN, please enter "0000".
5. Once the mobile device is paired with the unit, the Bluetooth LED indicator will light steadily in amber (red + green) color.

### **Playback iPad/iPhone/iPod touch or smart phone music**

6. Playback your iPad/iPhone/iPod touch or Android smart phone music.
7. You may adjust both the volume control of your mobile device and the volume control of this unit to find the most desirable volume setting.
8. (a) You may tap the  /  button from the mobile device to Play / Pause the mobile device music.  
(b) Press the  /  button from the unit to skip tracks forward / backward.

### **Operation hints**

(A) Auto-pairing/connection : When your mobile device is paired, in the case of turning the unit off and on again, the unit will auto-pair with the previously connected mobile device.

(B) Manual pairing/connection: In the case you would like to pair/connect other mobile device,

- (1) Switch off the Bluetooth function of the currently paired/connected mobile device.
- (2) In Bluetooth mode, the Bluetooth LED indicator will blink in red and steadily light in green

color and the unit will search for the neighboring Bluetooth device.

(3) Turn on the Bluetooth function of the desired mobile device and pair with the main unit.

**(C) Out of range situation:**

(1) During Bluetooth music playback, if the mobile device is moved to another place which is out of the Bluetooth communication range, the communication link disconnected then moves back the mobile device within range.

(2) The main unit Bluetooth LED indicator will blink in red and steadily light in green color which also searches for the neighboring Bluetooth device.

(3) In this case, you can reestablish the Bluetooth communication link and connect (pair) the main unit from the mobile device again.

----- Turn the unit off then on again, like case (A) above, to reestablish the Bluetooth communication link.

**Energy Saving Note**

In Bluetooth mode, if the Bluetooth communication link disconnected (the main unit) for around 5 minutes, the unit will turn off automatically.

**Care and Maintenance**

- Do not subject the unit to excessive force, shock, dust or extreme temperature.
- Do not tamper the internal components of the unit.
- Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
- Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
- Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

## Specifications

### POWER REQUIREMENT

Power Adaptor (NOT included)

Input: AC 100V – 240V ~ 50/60Hz

Output: DC 5V  $\equiv$  500mA 

Battery for the Speaker

3 x AA (UM-3) type rechargeable battery (Included)

Or,

3 x AA (UM-3) type Alkaline battery (NOT included)



If at any time in the future you want to dispose this product, please note that electrical products should not be disposed with household waste. Find out where your nearest recycling centre is. Consult your local authority or retailer for more details (Waste Electrical and Electronic Equipment Directive).

**THE SPECIFICATION AND EXTERNAL APPEARANCE OF THE SET ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.**